



Water in Yard Drainage System

List of Tools Needed, Shopping List, and Installation Instructions



Medium Capacity



8-10 Hours
Total Man Hours




\$190- \$230
Material Costs



10 Tools Needed

Tools Needed

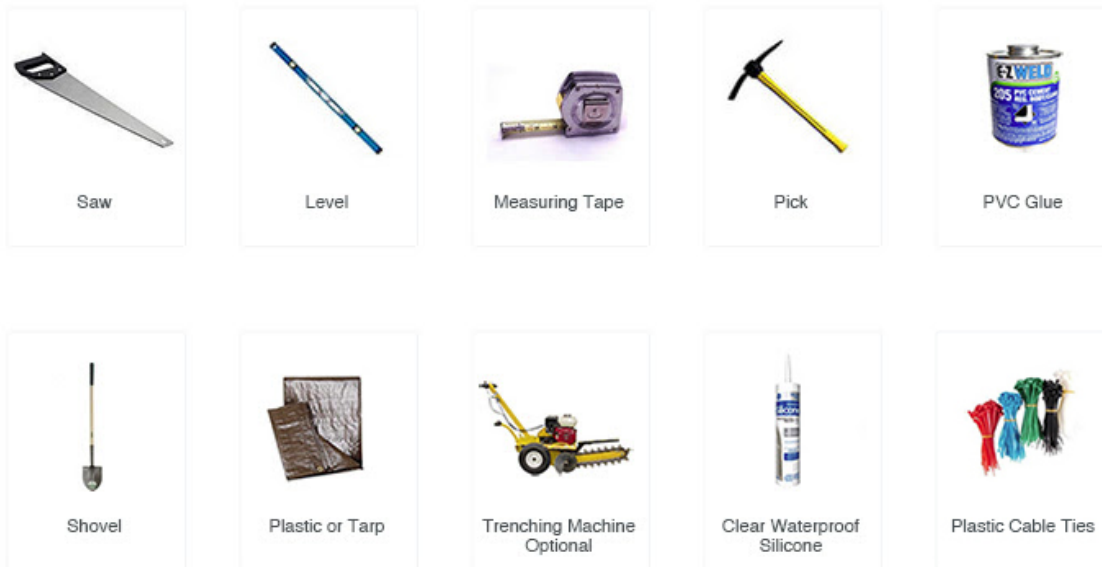

Shopping List

Quantity needed of each part will vary based on several factors specific to your project including system length, rainfall intensity, and number of problem areas. Pipe and fittings are offered in two sizes: 3" and 4". Size availability will vary based on region and store. Ensure that component sizes are consistent throughout your drainage system.

NDS Part Number	Description	Purchase Online
-----------------	-------------	-----------------

321 or 421	3" or 4" Pop-up Emitter with Elbow	Buy online
FWAS24	Flo-Well	Buy online
FWSD69	Flo-Well Surface Drain	Buy online
Generic	3" or 4" Drain Pipe	

Installation Instructions

Note Before You Dig

Prior to installation, have your local utility companies locate and mark the location of existing utilities. Lay out your drainage system and mark the location of trenches and individual parts to be installed with marking paint before digging. Carefully remove grass or plants that are located where the trench will be dug so they can be replanted after installation. Trenches should be dug such that they slope a minimum of 1% away from your house. Place all excavated dirt on a tarp so that it can be used later to backfill.

To speed up installation, a trenching machine can be used to dig all trenches, especially in areas with particularly hard soil. NDS drainage products have been designed to be installed in any soil type. Due to the variety of pipe types and sizes, double check that all pipe connection points are the correct size. Please follow all installation directions included with the individual parts of your drainage system. To create watertight connections between products, apply a bead of waterproof silicone to both parts and connect.

This system requires that the elevation of the Pop-Up Emitter be lower than the elevation of the area drain or the system will not drain

Step 1: Lay out system, dig trenches and holes

DOWNSPOUT RUNOFF: BEST SOLUTION - STEP 1



LAY OUT SYSTEM, DIG TRENCHES AND HOLES

Dig holes and trench for drain pipe and Flo-Well. Dry fit (no glue) the entire drainage system from the Flo-Well to the pop-up emitter. The Flo-Well should be installed at least 10' away from any existing structure. Measure and cut all pipe to necessary lengths. After completing each step, glue parts together.

Step 2: Install Flo-Well and drain pipe

The Flo-Well should be installed in a low spot in your yard. Knock out the appropriate holes in the side panels of the Flo-Well where the drain pipe will be installed. Assemble the Flo-Well using the interlocking side panels. Slide the drain pipe through the hole in the Flo-Well side panel.

TIP: Lay the Flo-Well panels on bricks or other hard



INSTALL FLO-WELL AND DRAIN PIPE

surfaces and use a hammer to knock out the holes in the side panels.

Step 3: Connect Flo-Well Surface Inlet



CONNECT FLO-WELL SURFACE INLET

Knock out the center hole of the Flo-Well lid. Place the lid on the Flo-Well side panels then place the Flo-Well Surface Inlet onto the Flo-Well lid.

Step 4: Install Pop-Up Emitter




INSTALL POP-UP EMITTER

Connect the drain pipe exiting the Flo-Well to an elbow with a weep hole. The elbow should be installed with the weep hole on the horizontal side of the elbow. Slide the Pop-up Emitter onto the elbow. An additional length of pipe can be used between the elbow and Pop-Up Emitter to bring the Pop-up emitter to the surface. The Pop-Up Emitter fits on the "bell" or "hub" end of the pipe or a pipe coupler.

TIP: To avoid damaging your Pop-Up Emitter with your lawn mower, raise the cutting level of the blades or avoid passing the mower over the Pop-Up Emitter

Step 5: Backfill and Replant

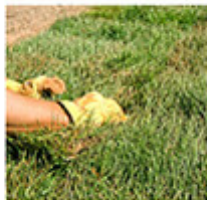

BACKFILL AND REPLANT

Backfill and replace any grass or plants that were removed.

TIP: DO NOT BACKFILL WITH SOIL WITH HIGH CLAY CONTENT. Water must be able to easily pass through the backfilled soil.



Have Questions?

Call [1-877-412-7467](tel:1-877-412-7467) or visit us on the web NDSPRO.com